



Automotive Performance Specialists

Intercooler Diverter for Mini Cooper S, R53 GP DDM-06-006GP



More cold air equals more power. The DDMWorks Intercooler Diverter does just that. The ICD diverts more air from the bonnet scoop.

Installation time of the Intercooler Diverter depends on you and your mechanical skills. It is suggested that you read through the directions a few times to familiarize yourself with the components of the kit, and your car.

If you are pretty handy with tools the intake can be installed in under 30 minutes, however we suggest that you schedule at least two hours for the installation.

If you have any questions during installation you can call us at (864) 907-6004 or email us at Tech@ddmworks.com.

TOOLS NEEDED

- | |
|---------------|
| Torx bit T-25 |
| 4mm Allen |

Before you start installing the intake you need to do the following:

1. Make sure the car has had time to cool as you will be working close to the engine.
2. Disconnect the negative terminal from the battery.

PACKING LIST

ITEM	QTY
DDMWorks Intercooler Diverter	1
M6x12 Button Head—PRE-INSTALLED	3
M6 Flat Washer—PRE-INSTALLED	3
Thin Edge Molding—PRE-INSTALLED	
Bulb Molding—PRE-INSTALLED	
M6x20, button head bolt	2
M6x60 button head bolt	2
M6 Flat Washer	4
M6 flat rubber washer	6



119A Highway 183
Piedmont, SC 29673


Automotive Performance Specialists

Tech Support
(864) 907-6004
Tech@DDMWorks.com

Diverter Installation

1. Remove stock hardware with T-25 Torx bit, replace with DDMWorks Intercooler and hardware.
2. Enjoy!

Intercooler Diverter Installed

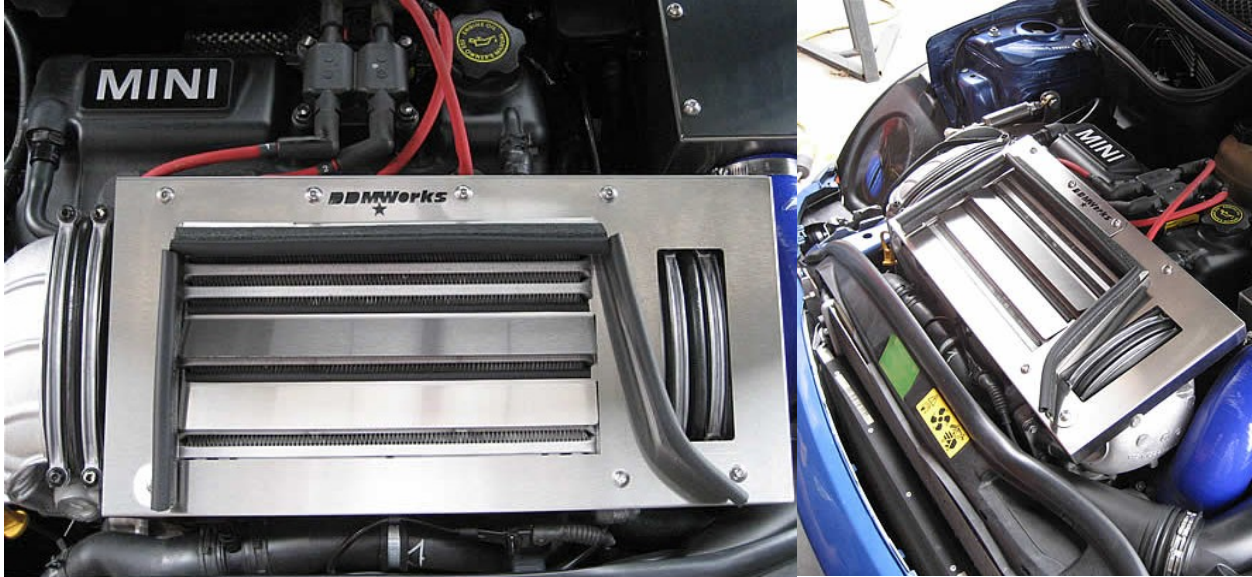

Congratulations!

You did it! Now go motor and enjoy your new DDM modification! If you have any questions feel free to give us a call or send us an email.

-DDMWorks Team

DDMWorks
Automotive Performance Specialists