



## Slingshot Transmission Close Out Panel



The transmission block off plate for the Slingshot installs on the transmission to prevent dirt and debris from entering the bell housing.

### TOOLS NEEDED

10mm wrench

### Packing List

1 - DDM-16-13 - Close out Panel

1 - M6 bolt stainless steel

1 - M6 Stainless Steel Washer


## INSTALLATION IS EASY!



### To Install:

Looking at the passenger side of the engine, find where the back of the engine meets the transmission. Just behind the exhaust you will see an opening on the transmission like the picture to the left.

Once you find the opening in the front of the transmission, reach down and put the new block off plate in position and secure with the stainless steel bolt and washer, installation should look like the picture to the left. The upwards bends on the new block off plate face forward.

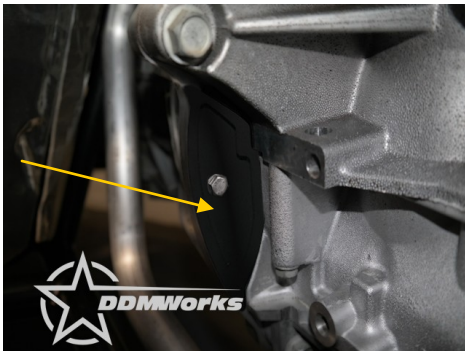

If you have any questions during installation, feel free to call or text our tech support line—864-907-6004, or send us an email—[tech@ddmworks.com](mailto:tech@ddmworks.com).

Thank you for choosing DDMworks.



119-A Hwy 183  
Piedmont, SC 29673  
**Tech Support**  
(864) 907-6004  
[Tech@DDMWorks.com](mailto:Tech@DDMWorks.com)

R42216im