


R56 MINI Cooper S - 2007+ PFB REFRESH KIT (DDM-07-006-RF)

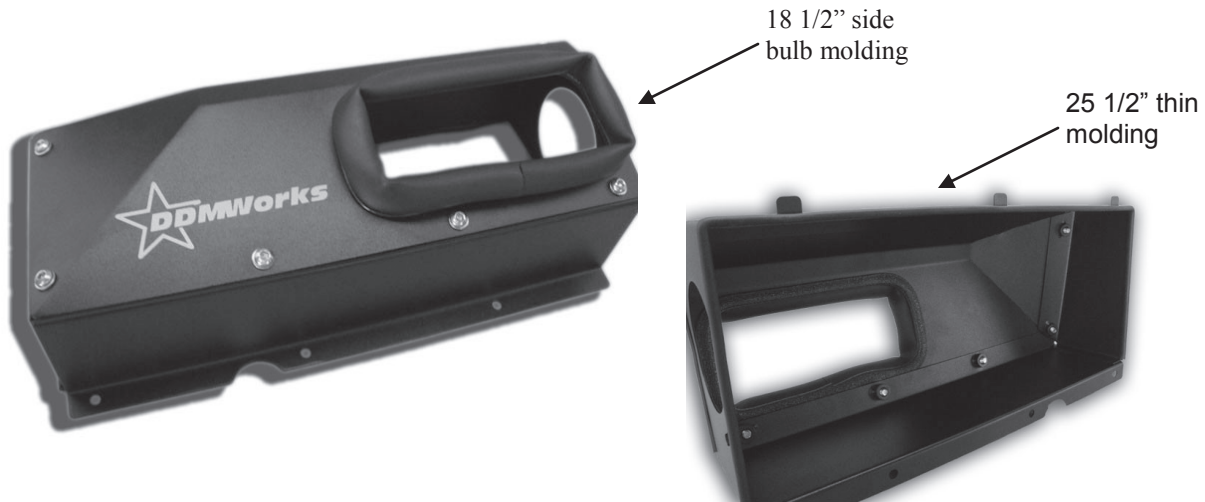

TOOLS NEEDED
Sharp scissors or shears
4mm Allen key
Phillips head screw driver


PACKING LIST	
Description	Qty
18 1/2" side bulb molding	1
25 1/2" thin molding	1

Before you do any work under your bonnet you need to do the following:

1. Make sure the car has had time to cool as you will be working close to the engine.
2. Disconnect the negative terminal from the battery.

Removal of R56 PFB

1. Remove 3 Phillips head screws from intake base.
2. Lift box from plastic intake bottom.
3. Replace thin edge molding along the bottom of the intake
4. You may find it easier to replace the side bulb molding on the lid while it is still attached to the box. If you find it necessary to remove the lid use an allen key to remove the 6 button head bolts.
5. Re-assemble and re-install!

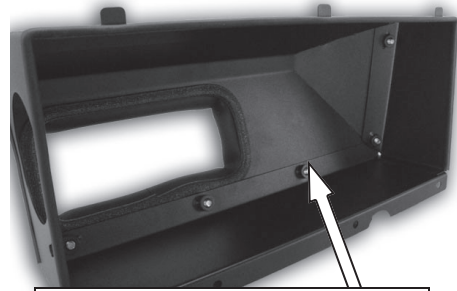

Replace thin molding along bottom of intake

If you have any questions feel free to give us a call, text or send us an email.

DDMWorks Team

Tech@ddmworks.com
www.ddmworks.com
864-438-4949 Shop
864-907-6004 Tech Support, call or text



Replace side bulb molding along top